



Item	Part Number	Description	
Bowls			
Α	100-009ORG-R	Orange ABS Plastic Bowl	
	100-009GRN-R	Green ABS Plastic Bowl	
	100-009YEL-R	Yellow ABS Plastic Bowl	
	100-008R	Stainless Steel Bowl	
	AP100-011A	Stn. Stl. Flanged Bowl For Deck Mount	

Drain Plate Assemblies		
В	AP150-012A	Drain Plate Assembly for Plastic Bowls
	AP150-012B	Drain Plate Assembly for Stainless Bowls
	Note: Includes Drain Plate, Cupped Washer, And Gasket	

Waste Receptors		
С	150-014E-2	Cast Aluminum Waste Receptor for Wall Mount Units
	150-066-2	Cast Aluminum Waste Receptor for Pedestal Units

Ball Valve Assemblies			
D	AP600-101H	1/2"IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, Horizontal	
	AP600-101V	1/2"IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, Vertical	
	AP600-101H-HFC	1/2"IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, for Hand/ Foot Control, Horizontal	
	AP600-101V-HFC	1/2"IPS Stay-Open Chrome Plated Brass Ball Valve with Flag Handle, for Hand/ Foot Control, Vertical	
	AP600-104	1/2" IPS Brass Stay-Open Ball Valve, Push- Down Control	
E	AP050-010	Stainless Steel Foot Treadle and Return Spring with Aluminum Clevis Pin	
F	150-032	Powder Coated Cast Aluminum Floor Flange, 1-1/4" NPT Female Connection	
G	AP470-001	GS-Plus™ Spray Head Assy.	
Н	AP470-100R	(2) GS-Plus™ Spray Heads with Chrome Plated Brass Fittings	
1	BI136-02-04	3/8" IPS X 2-1/4" Brass Shank	

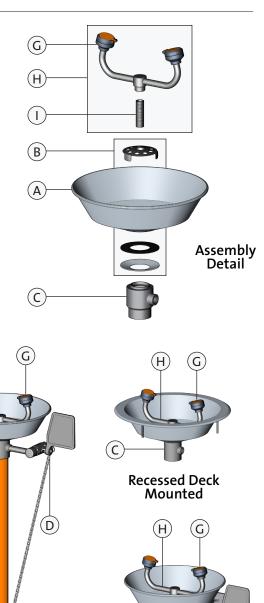

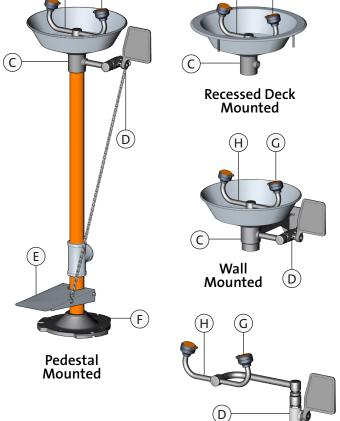


Swing Deck Mounted




This guardian equipment product is equipped with GS-Plus™ spray heads. Each head features:

- Tough polypropylene plastic construction
- Highly visible integrated nylon dust cover
- Easily accessible 1.8 GPM flow control
- Dense (60 pore per inch) polyurethane filter
- Unique design provides a consistently soft, full spray of water across a range of working pressures from 30 to 100 PSI.

Item	Part Number	Description
Α	AP470-001	GS-Plus™ Spray Head (assembled)
В	AP470-002R	Dust Cover and Cap Assembly
С	470-004R	60 PPI Polyurethane Filter
D	470-005R	1.8 GPM Flow Control

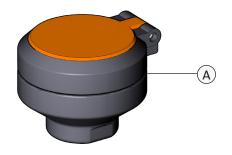

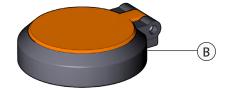










In order to operate properly, the flow control must be inserted into the body concave end first.

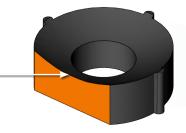

Distributed by: Safety Emporium PO Box 1003 Blackwood, NJ 08012

Ph: (866) 326-5412 toll-free Fax: (856) 553-6154 esupport@safetyemporium.com www. safetyemporium.com/G1814

(D)