

- **G2010** Front Entry Enclosure, All-Stainless Steel Eyewash and Shower Safety Station, Bottom Drain.
- **G2010PS** Same as above except with proximity switches for event sensing.

Application: Stainless steel eye wash and shower safety station in stainless steel booth with single entry and modesty curtain (12 mil, orange vinyl material approved for clean room usage). This product is ideal for areas that contain sensitive equipment that cannot be splashed with water, as booth and curtain contain water from emergency shower while keeping the rest of the room dry. Especially useful in clean rooms with perforated floors.

Shower Head: 10" diameter stainless steel with 20 GPM flow control.

Shower Valve: 1" IPS stainless steel stay-open ball valve with stainless steel pull rod. Pulling down on pull rod activates shower; shower remains in operation until pull rod is returned to original closed position.

Eyewash Spray Head Assembly: Two GS-Plus spray heads mounted on stainless steel supply arms. Each spray head has individually adjustable flow control and filter to remove impurities from water and stainless steel dust covers.

Eyewash Valve: 1/2" IPS stainless steel rotating plug-type valve. Furnished with Teflon coated O-ring seals.

Enclosure: 16 gauge, type 304 stainless steel, three sided enclosure with #4 satin finish and welded seams.

Pipe and Fittings: All pipe and fittings are brushed stainless

Supply: 1" NPT top and bottom female inlet.

Waste: 4" NPT female outlet.

Sign: Furnished with ANSI-compliant identification sign.

Quality Assurance: Unit is completely assembled and water tested prior to shipment.

> Distributed by: Safety Emporium PO Box 1003

Blackwood, NJ 08012 Ph: (866) 326-5412 toll-free

Fax: (856) 553-6154

esupport@safetyemporium.com www. safetyemporium.com










- O G2010 Front Entry Enclosure, All-Stainless Steel Eyewash and Shower Safety Station, Bottom Drain.
- **G2010PS** Same as above except with proximity switches for event sensing.

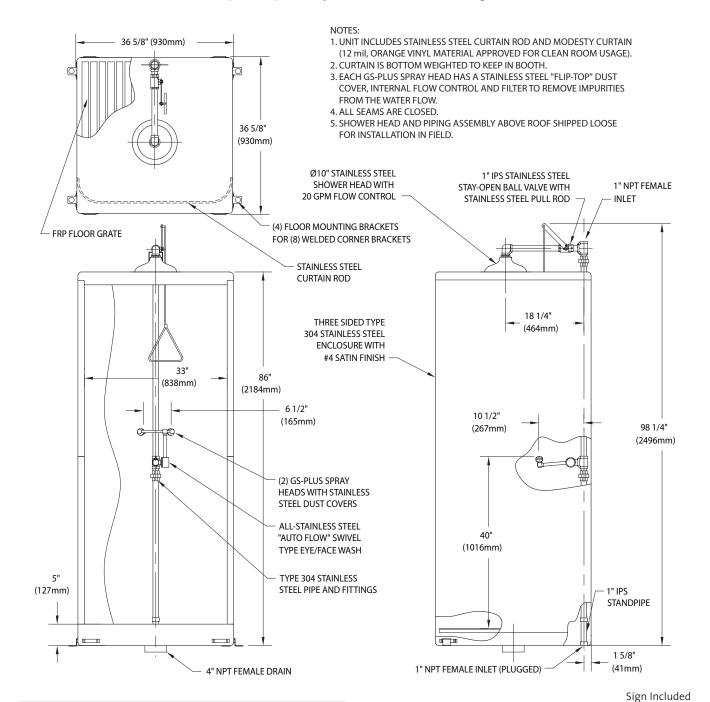

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document rev. 0115



